

MPower



MANUAL DE PARTES ALLANADORA JC446



CONSTRUCCIÓN

YouTube



www.mpower.com.mx

**ÍNDICE**

ALLANADORA JC446

E-1	FIGURA 1	PAG 03
E-2	FIGURA 2	PAG 05
E-3	FIGURA 3	PAG 07
E-4	FIGURA 4	PAG 09

FIGURA 1

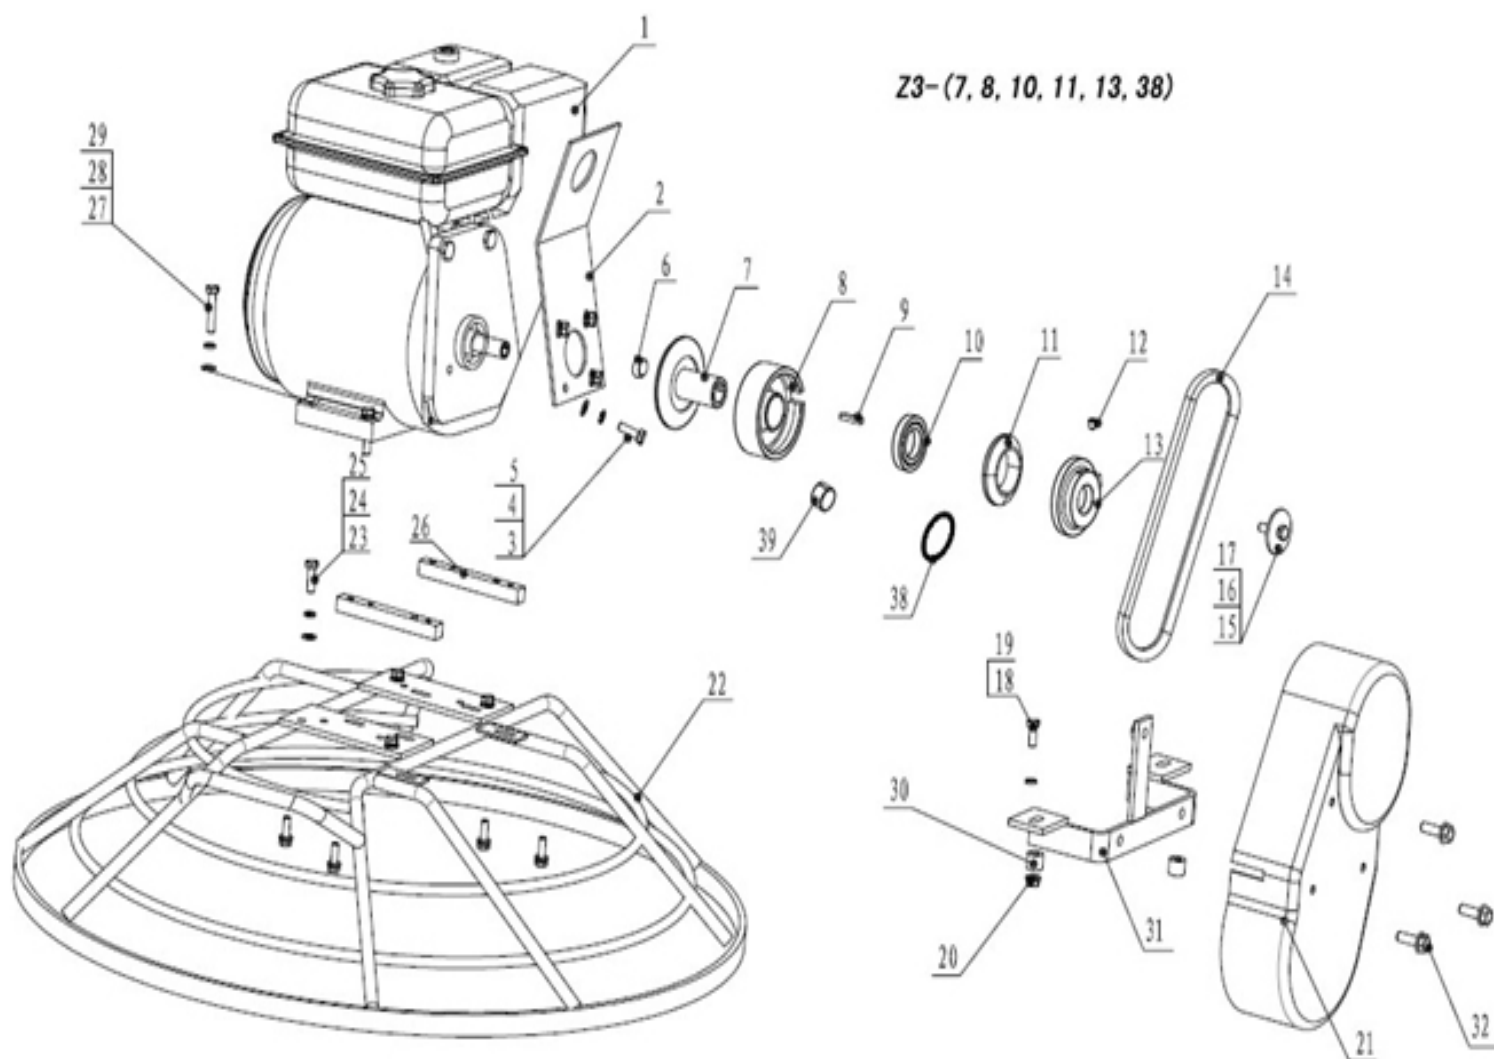


TABLA 1

SEC.	NO. PARTE	DESCRIPCIÓN	CANTIDAD
1	10001-JC446	LIFAN engine	1
2	10002-JC446	engine hanger plate	1
3	10003-JC446	six outer hexagon bolt	4
4	10004-JC446	elastic gasket	4
5	10005-JC446	flat gasket	4
6	10006-JC446	the engine spacer sleeve	1
7	10007-JC446	clutch driving wheel	1
8	10008-JC446	clutch driven wheel	1
9	10009-JC446	flat key	1
10	10010-JC446	bearing	1
11	10011-JC446	clutch centrifugal block	4
12	10012-JC446	fastening screw	1
13	10013-JC446	clutch wheel	1
14	10014-JC446	leather belt	1
15	10015-JC446	six outer hexagon bolt	1
16	10016-JC446	large gasket	1
17	10017-JC446	elastic gasket	1
18	10018-JC446	six outer hexagon bolt	2
19	10019-JC446	elastic gasket	2
20	10020-JC446	flange nut	2
21	10021-JC446	belt cover	1
22	10022-JC446	retainer	1
23	10023-JC446	six outer hexagon bolt	8
24	10024-JC446	elastic gasket	8
25	10025-JC446	flat gasket	8
26	10026-JC446	fixed square steel	2
27	10027-JC446	six outer hexagon bolt	4
28	10028-JC446	elastic gasket	4
29	10029-JC446	flat gasket	4
30	10030-JC446	hanging plate spacer sleeve	2
31	10031-JC446	the belt cover bracket	1
32	10032-JC446	six outer hexagon bolt	3
38	10038-JC446	cluth spring	1
39	10039-JC446	copper set of	1

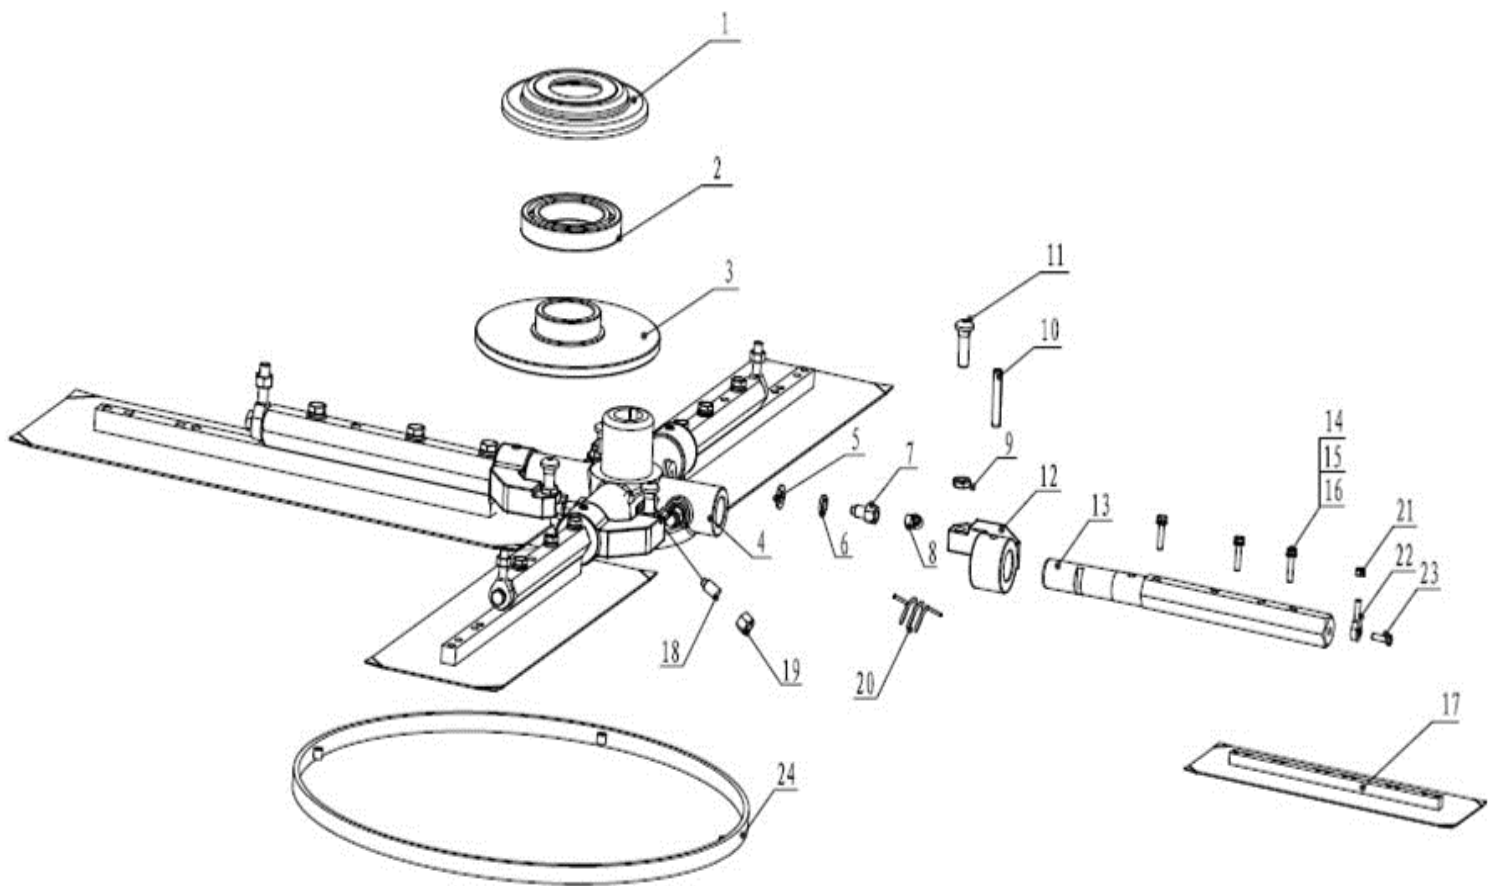
FIGURA 2

TABLA 2

SEC.	NO. PARTE	DESCRIPCIÓN	CANTIDAD
1	20001-JC446	gland	1
2	20002-JC446	bearing	1
3	20003-JC446	platen	1
4	20004-JC446	cross	1
5	20005-JC446	flat gasket	4
6	20006-JC446	elastic gasket	4
7	20007-JC446	Drag head screw	4
8	20008-JC446	lubricating nipple	4
9	20009-JC446	thin nut	4
10	20010-JC446	spring pin	4
11	20011-JC446	mushroom head bolt	4
12	20012-JC446	big bend	4
13	20013-JC446	tool arm (Jincheng)	4
14	20014-JC446	six outer hexagon bolt	16
15	20015-JC446	elastic gasket	16
16	20016-JC446	flat gasket	16
17	F446	Llana 46" acabado (6x18)	4
	C446	Llana 46" combinada (8x18)	1
18	20018-JC446	set screw	1
19	20019-JC446	jam nut	1
21	20021-JC446	nut	8
22	20022-JC446	joint bearing	4
23	20023-JC446	six outer hexagon bolt	4
24	20024-JC446	blade arm fixing ring(Jincheng)	1

PÁG 07

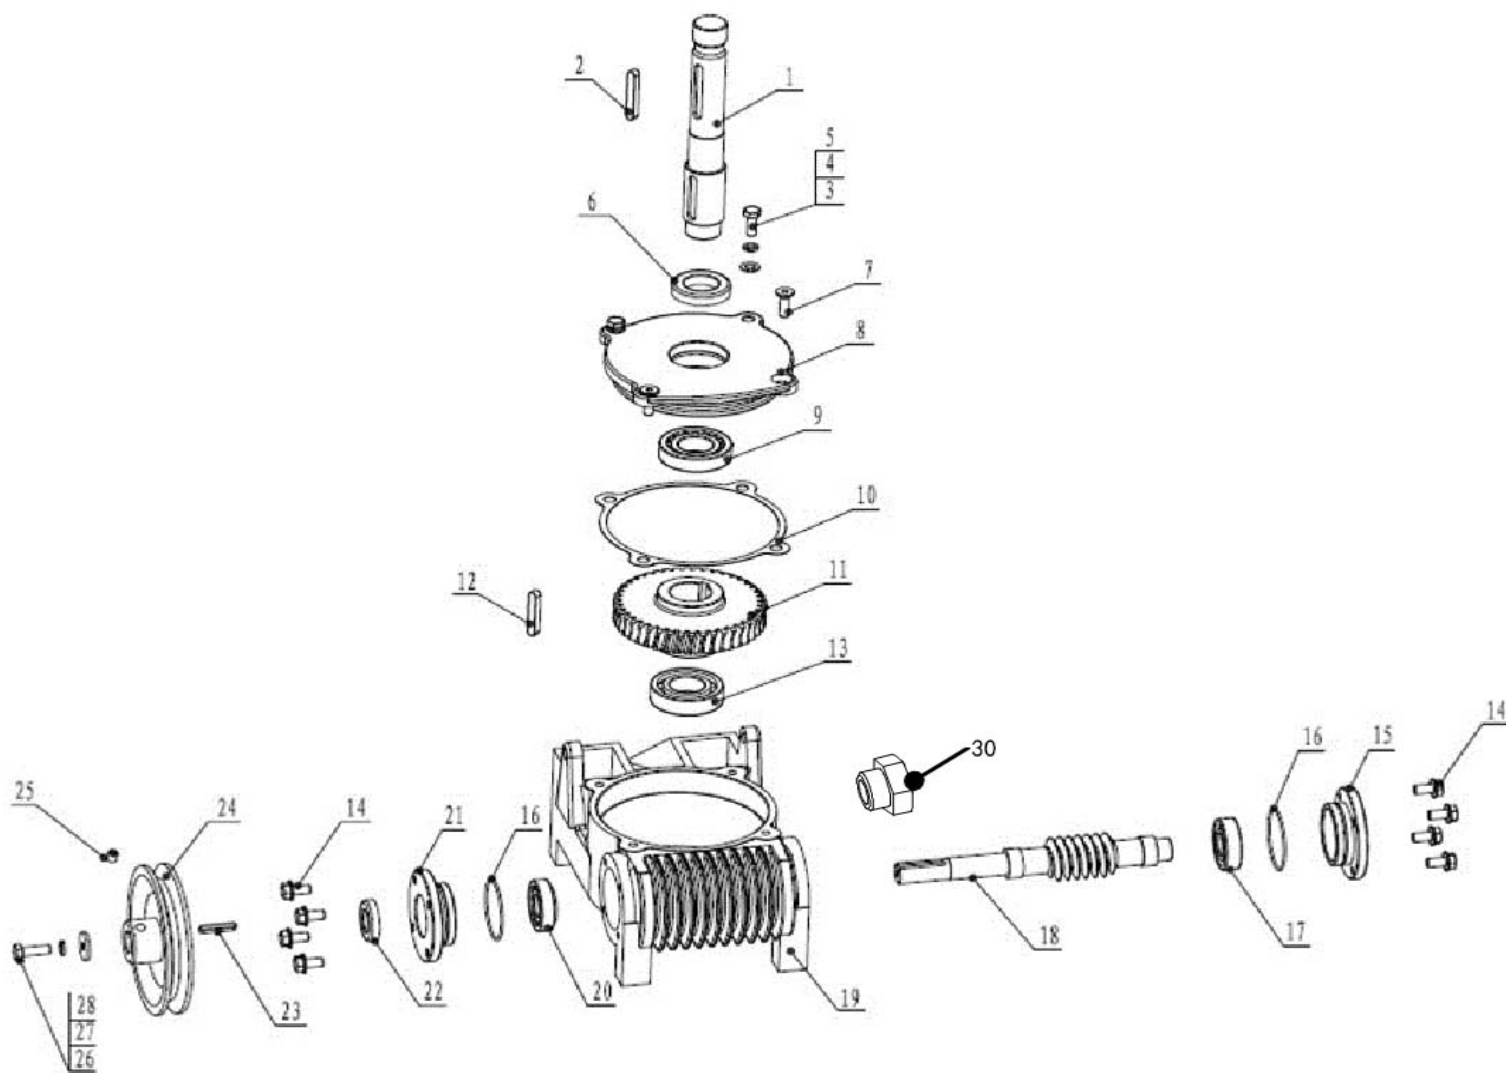


TABLA 3

SEC.	NO. PARTE	DESCRIPCIÓN	CANTIDAD
1	30001-JC446	turboshaft	1
2	30002-JC446	flat key	1
3	30003-JC446	six outer hexagon bolt	2
4	30004-JC446	elastic gasket	2
5	30005-JC446	flat gasket	2
6	30006-JC446	oil seal	1
7	30007-JC446	flat cup six hexagon bolt	2
8	30008-JC446	big cover	1
9	30009-JC446	bearing	1
10	30010-JC446	paper washer	1
11	30011-JC446	38 teeth turbine	1
12	30012-JC446	flat key	1
13	30013-JC446	bearing	1
14	30014-JC446	six outer hexagon bolt	8
15	30015-JC446	box body without hole side cover	1
16	30016-JC446	O ring	2
17	30017-JC446	bearing	1
18	30018-JC446	38 teeth turbine	1
19	30019-JC446	box body	1
20	30020-JC446	bearing	1
21	30021-JC446	the through hole side cover of box body	1
22	30022-JC446	oil seal	1
23	30023-JC446	flat key	1
24	30024-JC446	pulley	1
25	30025-JC446	fastening bolt	1
26	30026-JC446	six outer hexagon bolt	1
27	30027-JC446	elastic gasket	1
28	30028-JC446	flat gasket	1
29	30029-JC446	gear box assy	1
30	30030-JC446		

FIGURA 4

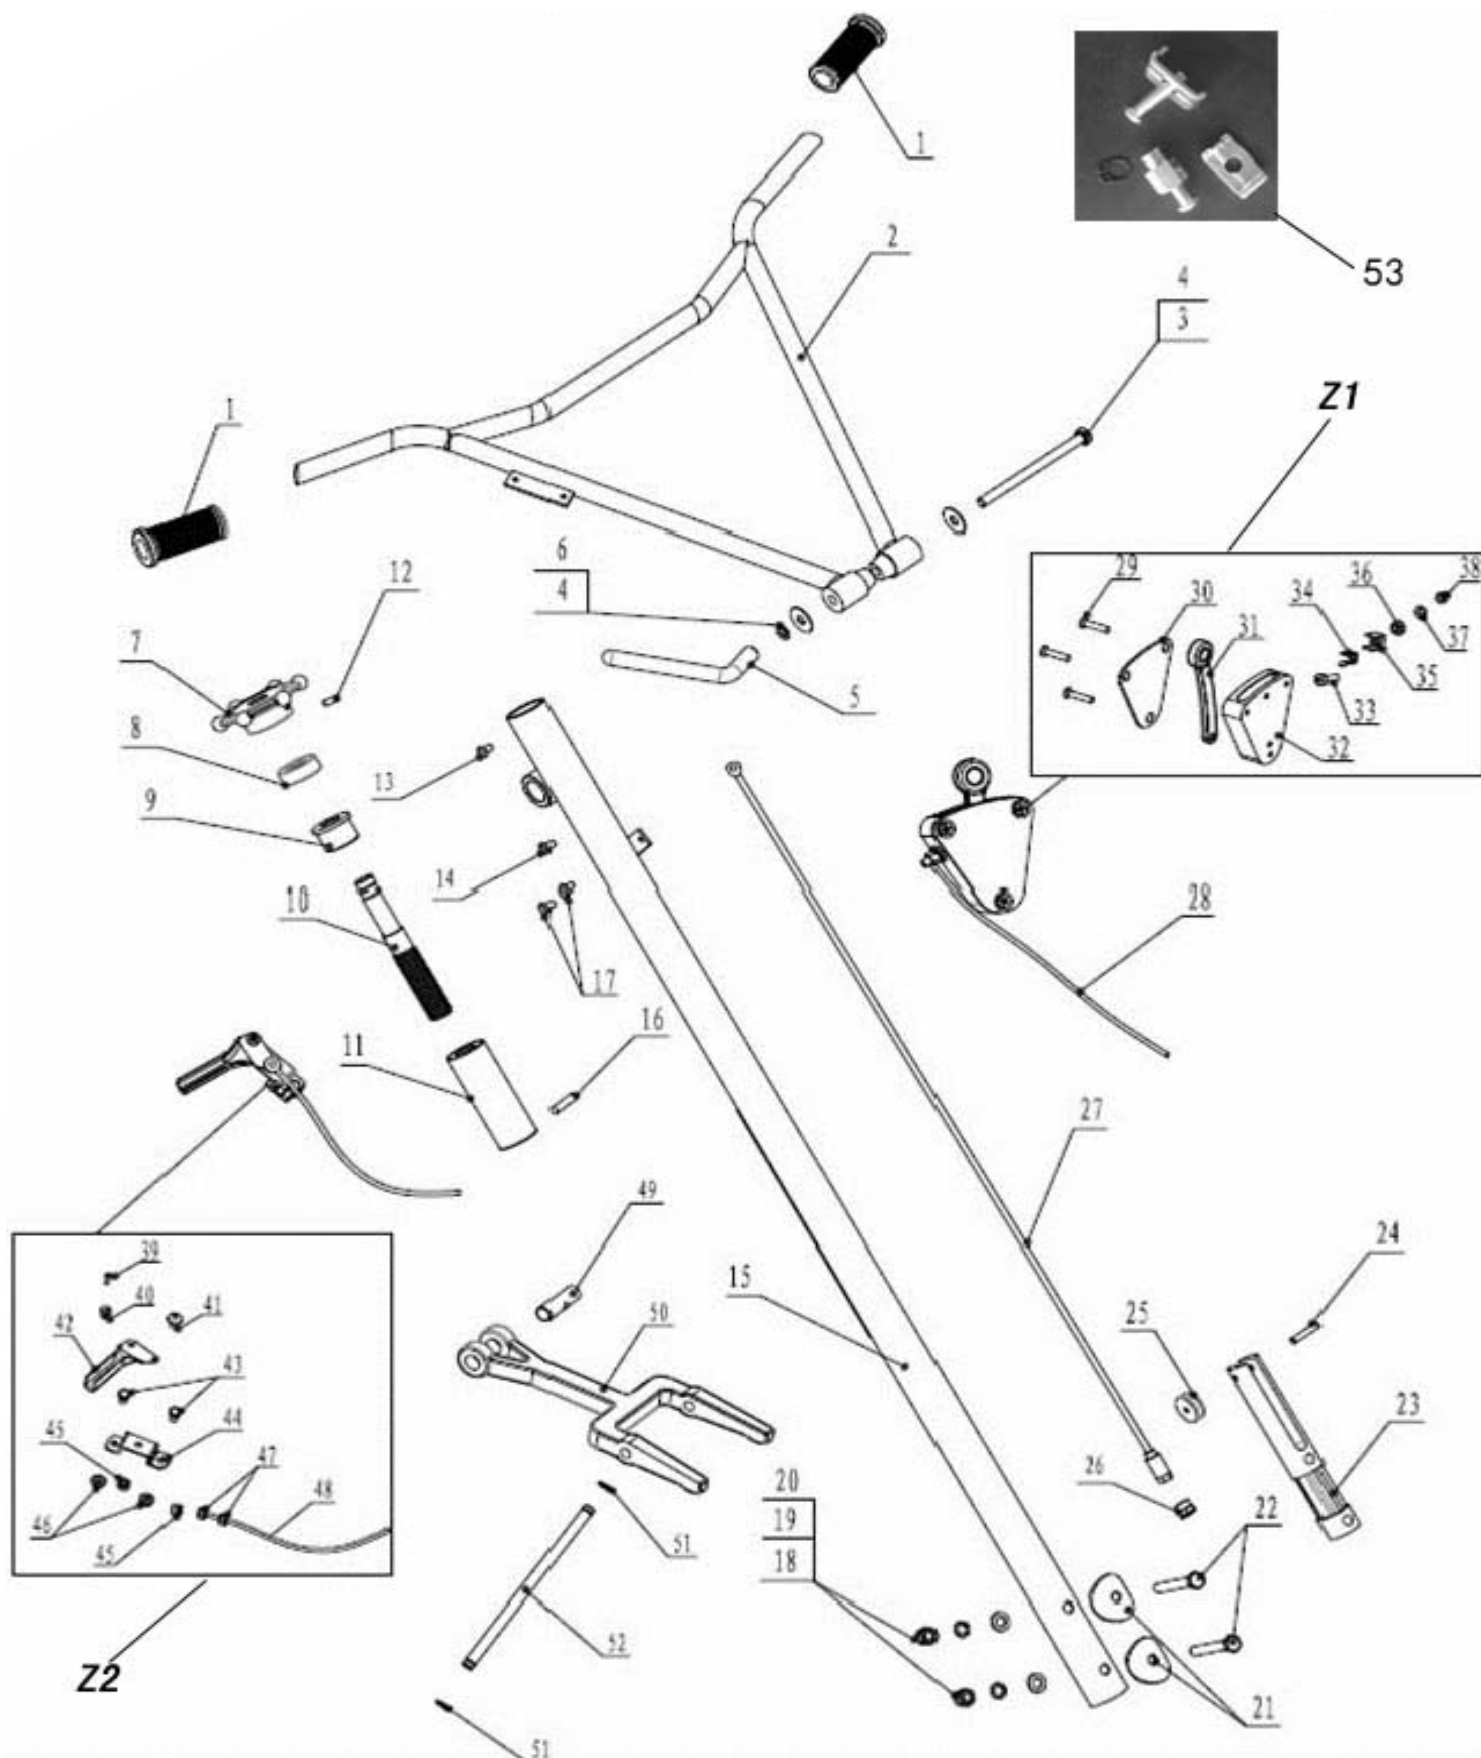


TABLA 1

SEC.	NO. PARTE	DESCRIPCIÓN	CANTIDAD
1	40001-JC446	rubber handle	2
2	40002-JC446	handle	1
3	40003-JC446	six outer hexagon bolt	1
4	40004-JC446	increase the flat pad	2
5	40005-JC446	locking lever	1
6	40006-JC446	elastic gasket	1
7	40007-JC446	The six corners of the handwheel	1
8	40008-JC446	bearing (shell)	1
9	40009-JC446	plastic guide sleeve	1
10	40010-JC446	adjusting screw	1
11	40011-JC446	adjusting screw sleeve	1
12	40012-JC446	fastening screw	1
13	40013-JC446	inside six socket head cap screw	1
14	40014-JC446	inside six socket head cap screw	1
15	40015-JC446	main rod (welding)	1
16	40016-JC446	elastic pin	1
17	40017-JC446	half round head cross recessed screws	2
18	40018-JC446	loosen nut	2
19	40019-JC446	elastic gasket	2
20	40020-JC446	flat gasket	2
21	40021-JC446	main rod pallet	2
22	40022-JC446	six outer hexagon bolt	2
23	40023-JC446	U type aluminum fork	1
24	40024-JC446	cylindrical pin	1
25	40025-JC446	pulley	1
26	40026-JC446	loosen nut	1
27	40027-JC446	grimlock	1
28	40028-JC446	flameout line	1
29	40029-JC446	flat cup cross recessed screws	3
30	40030-JC446	safety switch cover	1
31	40031-JC446	safety switch handle	1
32	40032-JC446	safety switch casing	1
33	40033-JC446	half round head cross recessed screws	1
34	40034-JC446	copper pins	1

TABLA 4

SEC.	NO. PARTE	DESCRIPCIÓN	CANTIDAD
35	40035-JC446	insulating seat	1
36	40036-JC446	spacer sleeve	1
37	40037-JC446	red paper pad	1
38	40038-JC446	ordinary nut	1
39	40039-JC446	half round head cross recessed screws	1
40	40040-JC446	copper screw	1
41	40041-JC446	big round head screw cross	1
42	40042-JC446	throttle switch	1
43	40043-JC446	six outer hexagon bolt	2
44	40044-JC446	throttle switch seat	1
45	40045-JC446	lock nut	1
46	40046-JC446	flange nut	2
47	40047-JC446	ordinary nut	2
48	40048-JC446	hard throttle cable	1
49	40049-JC446	grimlock revoked	1
50	40050-JC446	fork	1
51	40051-JC446	axis card	2
52	40052-JC446	fork pin	1
53	40053-JC446		1
Z1	Z0001-JC446	Protection switch assy	1
Z2	Z0002-JC446	throttle switch assy	1

MPower

MANUAL DE PARTES

**ALLANADORA
JC446**



LADA SIN COSTO
01.800.506.82.86

SÍGUENOS EN:

You Tube



www.mpower.com.mx

**Km 126.5 Carretera Federal México-Puebla, Momoxpan, Cholula, Puebla.
MÉXICO. CP 72760**